



SETUP Manual

How to setup the IMPERA LINK™ Server



Screenshots and pictures may vary due to different versions or connected devices.


DIMENSIONS

Length:	12,8 cm
Width:	7,2 cm
Height:	2,2 cm



*Please do not remove the cover.
Removing the cover will render the device inoperable.*

ALIGNMENT

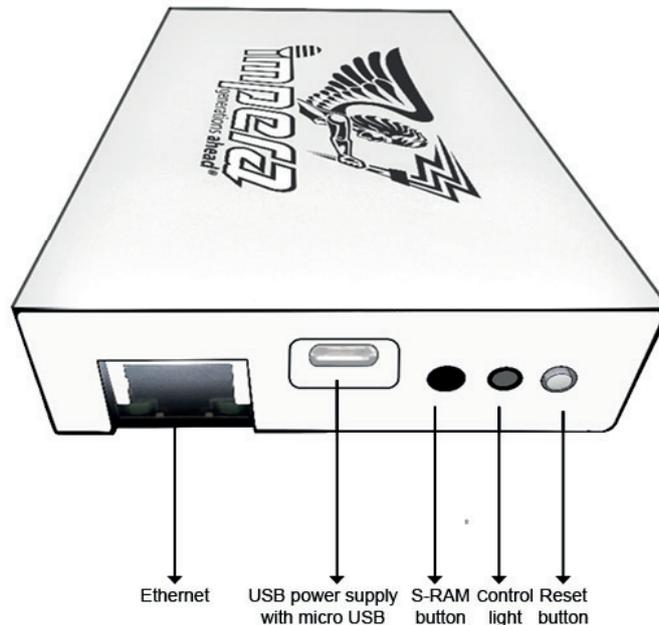

CONTROL LIGHT

- ⇒ **Red** – not connected to the Impera Link terminals
- ⇒ **Green or Orange** – connected to the Impera Link terminals

TROUBLE SHOOTING

- ⇒ If the Control light does not change from red to green or orange in 5 minutes, proceed by following these steps:
- ⇒ **Check** the network connections. If the Control light remains red proceed to next step.
- ⇒ **Reset** the device by holding the Reset button for 5 seconds. If the Control light does not change from red to green or orange after 2 minutes, proceed to next step.
- ⇒ **Restart** the device (unplug the micro-USB cable), wait until the Control light turns off, reinsert the micro-USB cable into the device. The device should set up in 5 minutes.

CONNECTION

- ⇒ Connect the **IMPERA LINK™** server via USB cable to the Backplane (or FireFox/Cobra) of one of your **IMPERA LINK™** terminals.
- ⇒ Connect the **IMPERA LINK™** server to a Switch.
- ⇒ Connect all **IMPERA LINK™** terminals to this Switch.
- ⇒ When connecting the **IMPERA LINK™** server in your server room (from there to a switch and further to the terminals), a USB power supply 5V/ at least 500mA with micro-USB is needed.
- ⇒ The **IMPERA LINK™** settings can be conducted from each connected terminal --> **SETUP SOFTWARE**.


SETUP PROCEDURE

- ⇒ Turn on the terminal(s) with the **IMPERA LINK™** software.
- ⇒ When the Persistent storage error page is displayed, proceed by connecting the **IMPERA LINK™** server.
- ⇒ Connecting the **IMPERA LINK™** server:
 - When the **IMPERA LINK™** server is connected to the terminals, the Control light will change from **red** to **green** or **orange**.
- ⇒ Now the terminal(s) can be “Initialized” --> **SETUP SOFTWARE**.

SETUP SOFTWARE - SERVER INITIALIZATION SETTINGS

When the Impera Link Server device is connected to the terminal for the first time, Server Initialization Settings are shown.

To initialize Server, Server Currency needs to be set by pressing the button “Change Currency”.

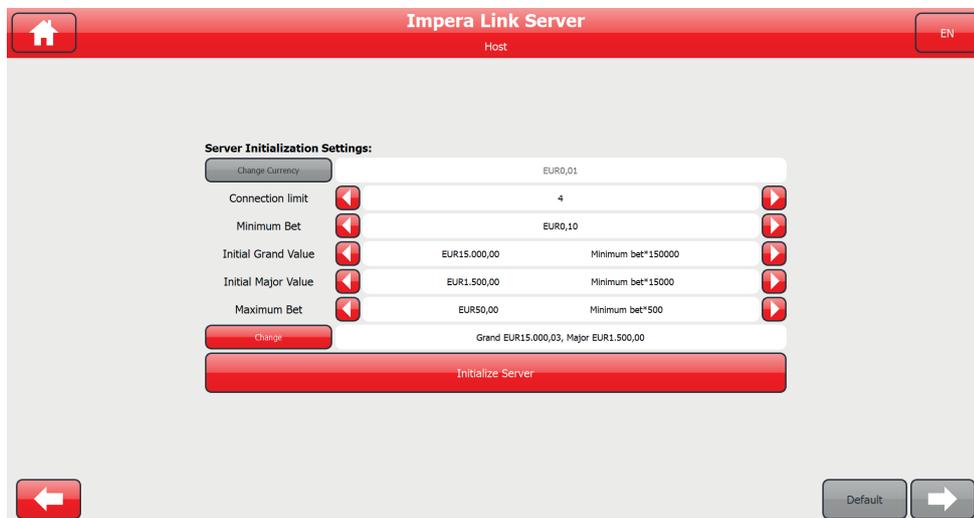

The screenshot shows the 'Impera Link Server' interface with the following settings:

Server Initialization Settings:	
Change Currency	EURO,01
Connection limit	4
Minimum Bet	EURO,10
Initial Grand Value	EUR15.000,00 Minimum bet*150000
Initial Major Value	EUR1.500,00 Minimum bet*15000
Maximum Bet	EUR50,00 Minimum bet*500
Change	Grand EUR15.000,03, Major EUR1.500,00
Initialize Server	

Navigation buttons: Home (top left), EN (top right), Back (bottom left), Default (bottom right).


SETUP SOFTWARE - OPERATOR MENU/IMPERA LINK

- ⇒ Terminal ID can be set to identify each connected terminal.
- ⇒ Button “Generate New Terminal Limit Request”: new Terminal Limit can be defined by contacting the support. Max. Terminal Limit 4, 8, 12 or 25 is possible.



If Terminal Limit is set to 4 then 4, 3 or just 2 clients can be connected.

Upon request you need to enter a PIN by pressing the „Enter PIN (Pending Request)“ button.

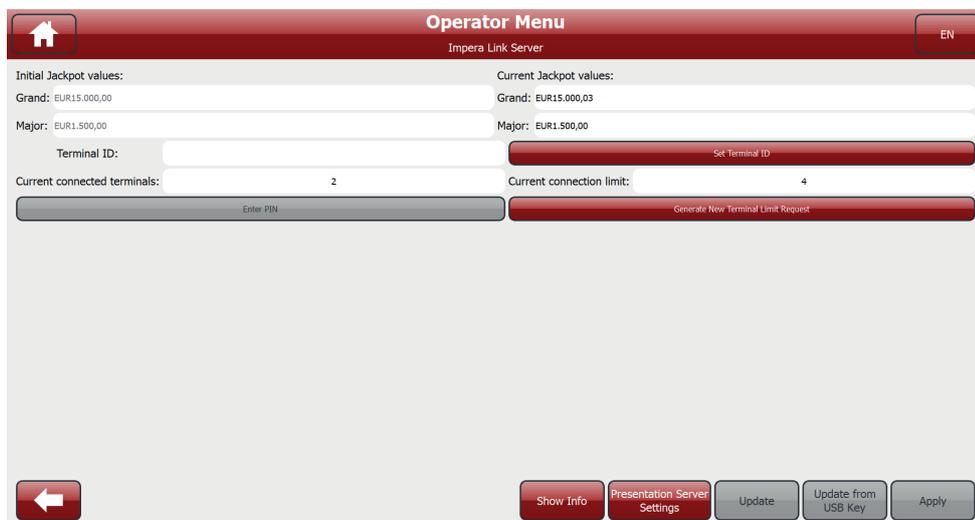


The screenshot shows the 'Operator Menu' for the 'Impera Link Server'. The interface is divided into two columns for 'Initial Jackpot values' and 'Current Jackpot values'. The 'Initial Jackpot values' section shows 'Grand: EUR15.000,00' and 'Major: EUR1.500,00'. The 'Current Jackpot values' section shows 'Grand: EUR15.000,03' and 'Major: EUR1.500,00'. Below this, there is a 'Terminal ID:' field with a 'Set Terminal ID' button. The 'Current connected terminals:' is set to 2, and the 'Current connection limit:' is set to 4. There are buttons for 'Enter PIN' and 'Generate New Terminal Limit Request'. At the bottom, there are buttons for 'Show Info', 'Presentation Server Settings', 'Update', 'Update from USB Key', and 'Apply'. A home button is in the top left, and an 'EN' button is in the top right.



Please find more detailed info in the UPDATE Manual.

- ⇒ By pressing the „Show Info“ button, information like Impera Link Server version, Serial No. and the connected Terminals / Presentation Server can be seen.
- ⇒ To activate the „Update“ button, you need to trigger S_RAM Clear/Update Request by pressing the „S-RAM“ button and the „Reset“ button at the same time on the Impera Link Server device.

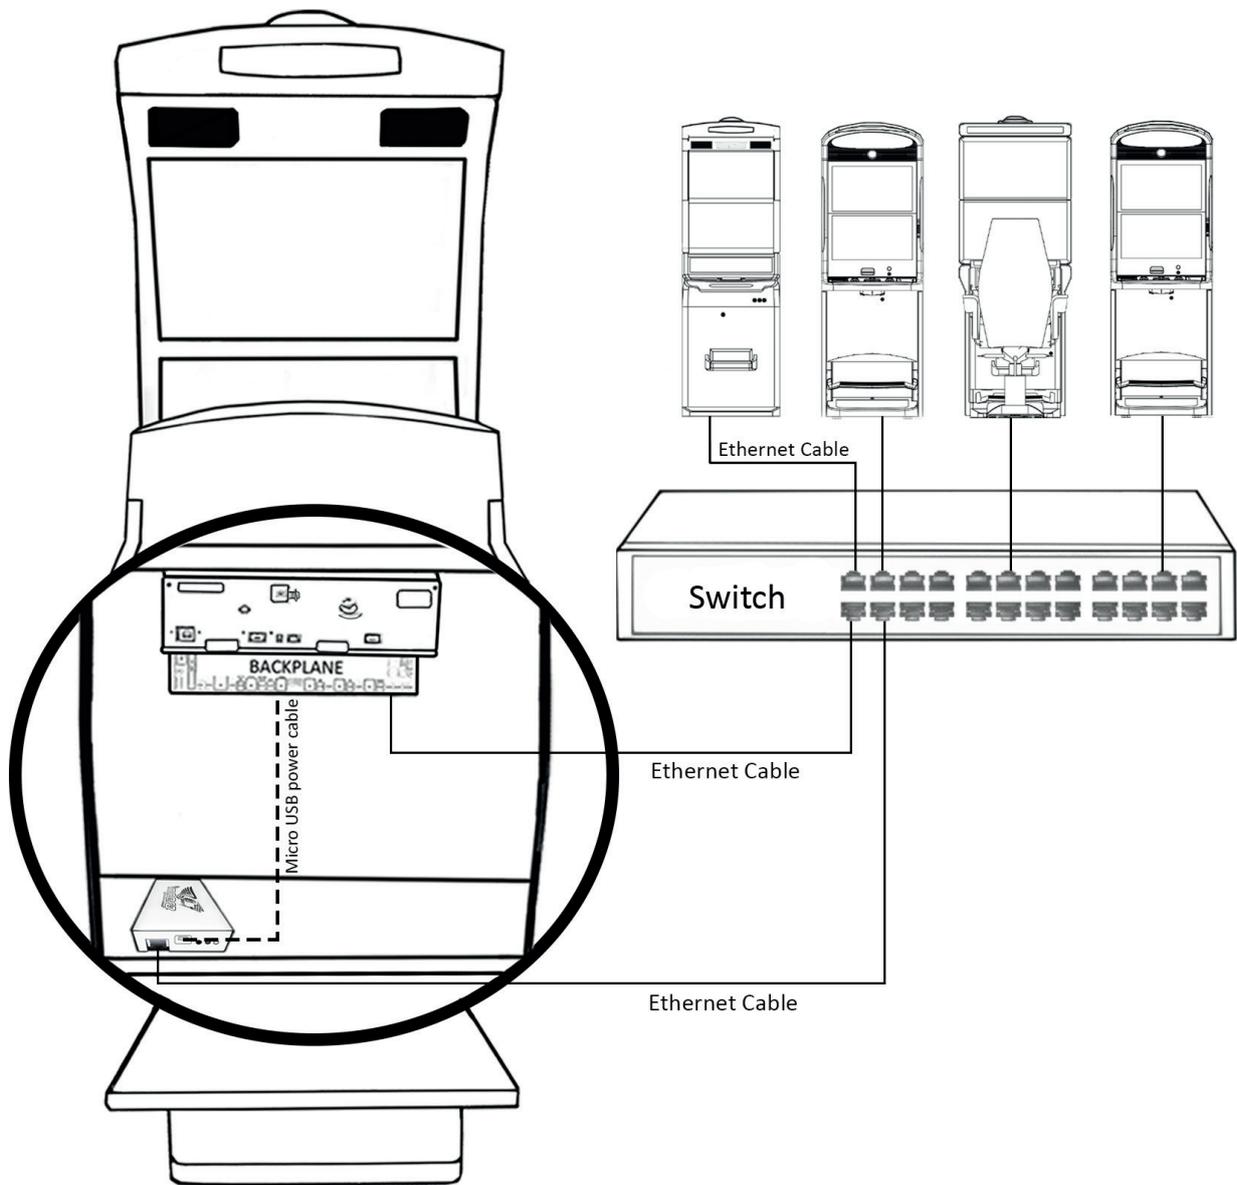

Please **CONTACT YOUR TECHNICAL SUPPORT TEAM** in case of any problems.



Scan to access all IMPERA LINK™ Server manuals.