



SETUP Manual

How to set up the IMPERA LINK™ Server



Screenshots and pictures may vary due to different versions or connected devices.


DIMENSIONS

Length:	12,8 cm
Width:	7,2 cm
Height:	2,2 cm



*Please do not remove the cover.
Removing the cover will render the device inoperable.*

ALIGNMENT

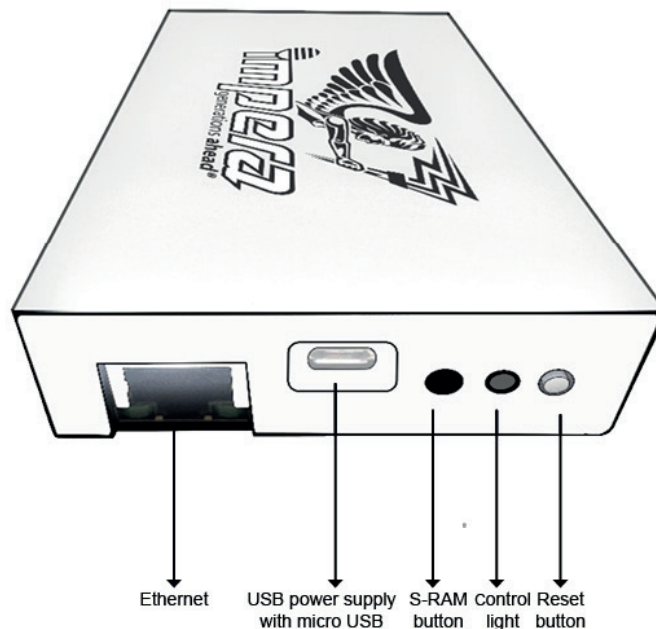

CONTROL LIGHT

- ⇒ **Red** – not connected to the IMPERA LINK™ terminals
- ⇒ **Green** or **Orange** – connected to the IMPERA LINK™ terminals

TROUBLESHOOTING

If the control light does not change from red to green or orange in 5 minutes, proceed by following these steps:

- ⇒ **Check** the network connections. If the control light remains red, proceed to the next step.
- ⇒ **Reset** the device by holding the Reset button for 5 seconds. If the control light does not change from red to green or orange after 2 minutes, proceed to the next step.
- ⇒ **Restart** the device by unplugging the micro-USB cable. Wait until the control light turns off, then reconnect the micro-USB cable. The device should complete the setup within 5 minutes.

CONNECTION

- ⇒ Connect the IMPERA LINK™ Server via USB cable to the Backplane (or FireFox/Cobra) of one of your IMPERA LINK™ terminals.
- ⇒ Connect the IMPERA LINK™ Server to a switch.
- ⇒ Connect all IMPERA LINK™ terminals to this switch.
- ⇒ When installing the IMPERA LINK™ Server in a server room and connecting it to the terminals via a switch, a 5 V USB power supply with at least 500 mA and a micro-USB connector is required.
- ⇒ The IMPERA LINK™ settings can be configured from any connected terminal → **SETUP SOFTWARE**.

SETUP PROCEDURE

- ⇒ Turn on the terminal(s) with the **IMPERA LINK™** software.
- ⇒ When the "Persistent Storage Error" page is displayed, connect the **IMPERA LINK™** Server.
- ⇒ Connecting the **IMPERA LINK™** Server:
 - When the **IMPERA LINK™** Server is connected to the terminals, the control light will change from **red** to **green** or **orange**.
- ⇒ Now the terminal(s) can be initialized. → **SETUP SOFTWARE**.

SETUP SOFTWARE

Impera Link Server - Change Currency

When the **IMPERA LINK™** Server device is connected to the terminal for the first time, Server Initialization Settings have to be set. To initialize the Server, the Currency Settings must first be defined on the "Change Currency" page.

The screenshot shows the "Impera Link Server" interface with the "Change Currency" screen. The title bar is red and contains a home icon, the text "Impera Link Server", and an "EN" button. Below the title bar, the screen is divided into three rows, each with a label on the left, a text input field in the center, and a red arrow button on the right. The first row is labeled "Currency" and shows "EUR Euro". The second row is labeled "Accounting Denomination" and shows "EUR 0,01". The third row is labeled "Show Currency/Credit" and shows "Mixed (Currency and Credit)". A large red arrow button is located at the bottom right of the screen.

Label	Value
Currency	EUR Euro
Accounting Denomination	EUR 0,01
Show Currency/Credit	Mixed (Currency and Credit)

SETUP SOFTWARE

Impera Link Server - Initialization

Press the button in the upper-left corner to switch between Super Jackpots and Jackpots.

Jackpot values can be set within the displayed range.

A one-time Jackpot Transfer Amount can be set if needed (default = 0,00).

Super Jackpots: An Add-on Value can be defined based on the currently configured Jackpot value.

Impera Link Server
Initialization

EN

Super Jackpots
Jackpots

SUPER GRAND JACKPOT
Grand Jackpot Base Value
Super Grand Jackpot Add-on Value
Allowed Add-on value Range: EUR 1,00 - EUR 8.000,00 (based on the current Grand Jackpot Base Value)
One-time Grand Jackpot Transfer Amount

Total Super Grand Jackpot
EUR 16.000,00
Increment: 0.0732%

Displayed as:
EUR 8.000,00 + EUR 8.000,00

SUPER MAJOR JACKPOT
Major Jackpot Base Value
Super Major Jackpot Add-on Value
Allowed Add-on value Range: EUR 1,00 - EUR 400,00 (based on the current Major Jackpot Base Value)
One-time Major Jackpot Transfer Amount

Total Super Major Jackpot
EUR 800,00
Increment: 0.3452%

Displayed as:
EUR 400,00 + EUR 400,00

Add-on value must be within the allowed range.
If Super Jackpots are disabled, only the base values will be displayed and used.

Terminal Connection Limit 12 Minimum Configurable Bet: EUR 0,10 Maximum Configurable Bet: EUR 350,00

Default
Initialize Server

Impera Link Server
Initialization

EN

Super Jackpots
Jackpots

GRAND JACKPOT
Grand Jackpot Base Value
One-time Grand Jackpot Transfer Amount

Total Grand Jackpot
EUR 8.000,00
Increment: 0.0819%

MAJOR JACKPOT
Major Jackpot Base Value
One-time Major Jackpot Transfer Amount

Total Major Jackpot
EUR 400,00
Increment: 0.4286%

Terminal Connection Limit 12 Minimum Configurable Bet: EUR 0,10 Maximum Configurable Bet: EUR 185,00

Default
Initialize Server

SETUP SOFTWARE


Operator Menu - Impera Link Server

- ⇒ Terminal ID can be set to identify each connected terminal.
- ⇒ “Generate New Terminal Limit Request” button: A new Terminal Limit can be requested by contacting Technical Support.
- ⇒ The available maximum Terminal Limits are 4, 8, 12, or 25.



If the Terminal Limit is set to 4, up to 4 clients can be connected.

When requested, enter the PIN by pressing the “Enter PIN (Pending Request)” button.

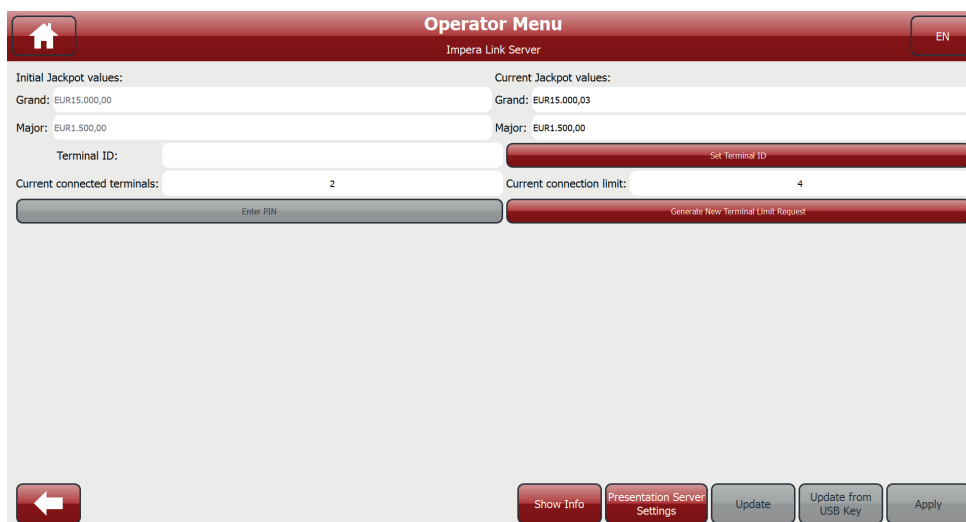


The screenshot shows the 'Operator Menu' for the 'Impera Link Server'. The interface has a red header bar with a home icon and an 'EN' button. Below the header, there are two columns of information. The left column shows 'Initial Jackpot values' with 'Grand: EUR15.000,00' and 'Major: EUR1.500,00'. The right column shows 'Current Jackpot values' with 'Grand: EUR15.000,03' and 'Major: EUR1.500,00'. Below this, there is a 'Terminal ID' field and a 'Set Terminal ID' button. The 'Current connected terminals' is 2, and the 'Current connection limit' is 4. There is an 'Enter PIN' button and a 'Generate New Terminal Limit Request' button. At the bottom, there are several buttons: 'Show Info', 'Presentation Server Settings', 'Update', 'Update from USB Key', and 'Apply'. A back arrow button is also present in the bottom left corner.



Please find more detailed information in the UPDATE Manual.

- ⇒ Press the “Show Info” button to display information such as the **IMPERA LINK™** Server version, serial number, connected terminals, and presentation server.
- ⇒ To activate the “Update” button, trigger the S_RAM Clear/Update Request by pressing the “S-RAM” and “Reset” buttons simultaneously on the **IMPERA LINK™** Server.

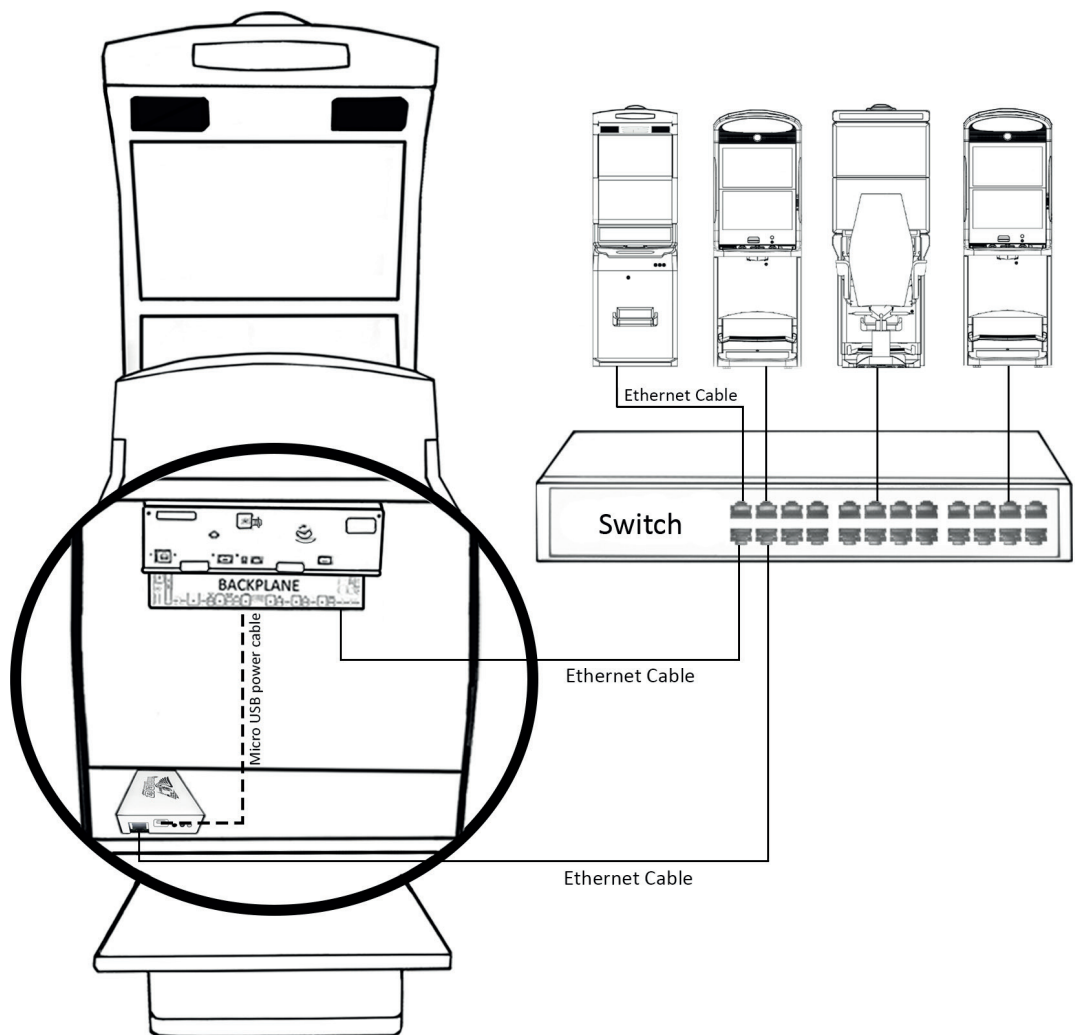

Please contact your Technical Support Team if you experience any problems.



Scan to access all IMPERA LINK™ Server manuals.