




## Server Update


How to update the IMPERA LINK™ Server



Screenshots and pictures may vary due to different versions or connected devices.

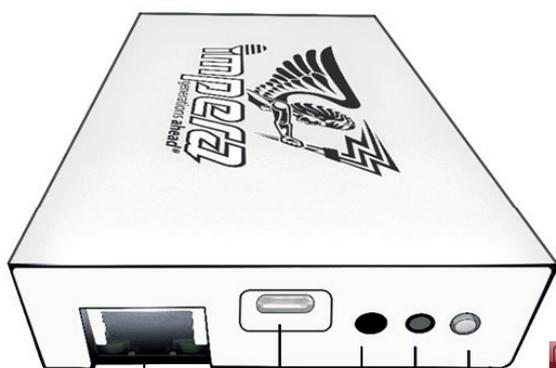

- ⇒ Ensure that all connected terminals are in Idle state.
- ⇒ Press the S-RAM button and the Reset button simultaneously to trigger the **SRAM Clear/Update request** on the **IMPERA LINK™ Server** device.
- ⇒ Start the update by pressing button Update in the Administration menu „Operator/Impera Link“.

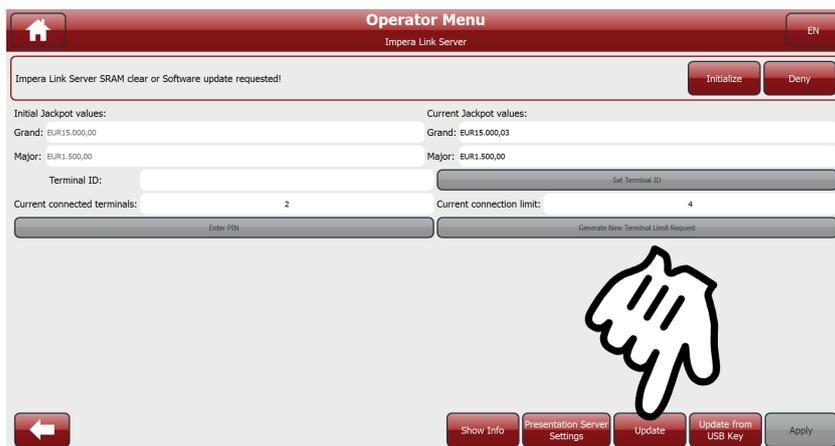

- ⇒ Challenge/Response code is needed.
- ⇒ After the update, the Server is restarted and a new Server is detected.
- ⇒ Terminals have to be restarted and Server has to be accepted and initialized.



Restart all connected terminals to accept the new IMPERA LINK™ Server.



Please CONTACT YOUR TECHNICAL SUPPORT TEAM in case of any problems.



Scan to access all IMPERA LINK™ Server manuals.